




SPEEDEE TRIM LLC | P.O. BOX 411663 • SF CA 94141  
SpeedeeTrim.com • Patent Pending

## **CORDLESS TRIMMER** How to Insert, Change, and Clean Blades

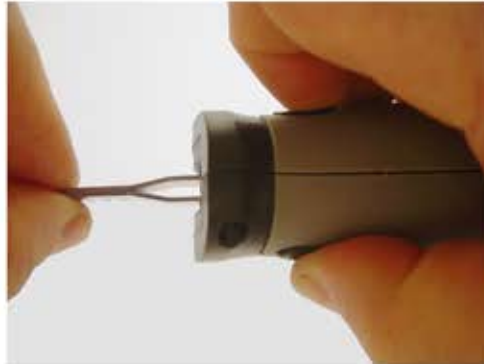


### **Insert Blade**

- By holding at the blade base, join the dual blades by sliding the rivet on one blade into the slot on the second blade. Align Blades.
- With the battery disconnected and safety lock applied, insert the blades into the receiving slot at the top until locked in place. Make sure the blades are locked in place before inserting battery in trimmer.



### **Remove Blade**

- To remove blades, with the battery disconnected press down firmly on the blade release buttons on either side of trimmer simultaneously while pulling the blades out by gripping them on either side.

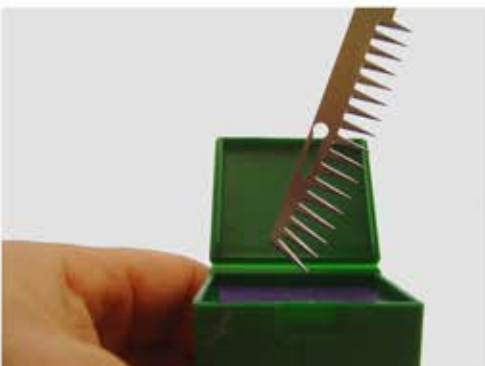

### **Clean Blade**

- Fill the blade scrubber box to approximately 3/4 capacity with isopropyl alcohol.
- With the battery or cord disconnected, remove the dirty blades.
- Insert blade into the scrubber individually -repeat up and down motion.
- Never operate the trimmer while in the blade scrubber as this will damage the bristles.
- Never scrape or clean the blades with anything metal as this will dull the blades.
- Always clean blades thoroughly after each use.